INSTRUCTIONS MANUAL

CBOXSMART




INDEX

- **1** DOWNLOAD MPS App- SPADA
- 2 App- SPADA ANDROID VERSION
 - A CONFIGURATE YOUR SMARTPHONE
 - B App SPADA ANDROID INSTALLATION
 - C HOW TO USE App- SPADA- ANDROID
 - D COMMON TECHNICAL ISSUES ANDROID
- **3** App- SPADA WINDOWS VERSION
 - A App SPADA WINDOWS INSTALLATION
 - B HOW TO USE- App -SPADA WINDOWS
 - C COMMON TECHNICAL ISSUES WINDOWS

Downl	oad MPS - App- spada1
1 Click on the	"REGISTRATION FORM" button and fill in the following form
REGIS	TRATION FORM
App Fo Fill in the fo	
	Test coupling MPS With this App for Smartphone is possible to see the pressure and extract excel value of pressure
	Company Office Office
	* Email: marketing@dicaes.cm Sumame Marin
	Name
2 You will receiv	e an email notification of your password to download App - SPADA
	App for digital test coupling MPS
PASSWORD	Dear user, you have requested to download our App for MPS digital test coupling. In order to download it, click the Download button and fill the password shown below.
CLICK ON DOWNLOAD BOTTON	Password: password Possword

• Enter the password and click on "Verify Password" button

3

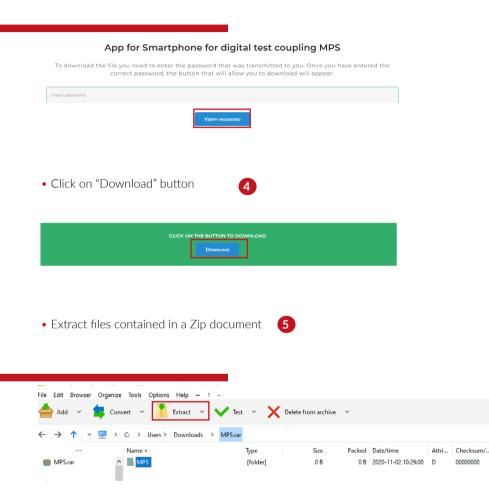

App SPADA ANDROID VERSION

ACONFIGURATE YOUR SMARTPHONE

ACCESS DIRECTLY FROM YOUR SMARTPHONE MPS.RAR > ANDROID

Attention! Required operating system: Android 4.4 – 4.4.4 KitKat o successive, without root.

This App IS NOT COMPATIBLE with Iphone

REQUIRED HARDWARE:

• Android Phone compatible with OTG USB. In case if you are not sure about the compatibility, download the app "USB OTG Checker" or equivalent from Play Store and verify.

• Wire OTG (acronym of On-The-Go). Is not a simple wire.



PRELIMINARY SETUP OF SMARTPHONE:

• Activate option **USB DEBUGGING** on the Smartphone

*Below procedure is not a standard procedure for all Smartphones, but depend of the Android version and of manufacturer of the phone..

Example procedure for Android 6.0 version or successive


• ACTIVATE USB DEBUGGING ANDROID :

> Go to Setting >
 > About dispositive (or About phone) >
 > About software>
 > Tap 7-8 times or more on Build
 Number (or Serial Number) until Developer mode is activated
 > After that, come back to Setting and go to
 Developer Option >

> Activate USB DEBUGGING >

For further technical information, we recommend you to introduce your model of mobile followed by activate usb debugging on YouTube

VIDEO TUTORIAL

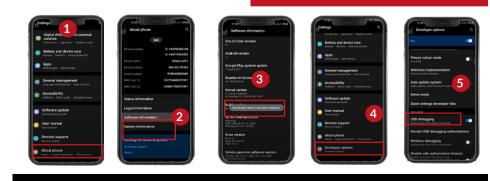

BAPP - SPADA - WINDOWS INSTALLATION

- Acces to ANDROID file
- Copy the file **SPADA.apk** to the smartphone **2**
- Run the installed program 3

CHOW TO USE: App- SPADA- ANDROID

- Access to SPADA App, previously installed 1
- CONNECT THE DIGITAL TEST COUPLING
- > Smartphone >
- > OTG Wire >
- Standard Wire 2 m >
- > Test coupling MPS >



4 Automatically the device will be activated



COMMON TECHNICAL ISSUES - ANDROID

 If you intend to monitor the pressure for a long time, it is essential to disable all the energy saving and application optimization options applied to the Spada program. Otherwise, the timing necessary for correct operation could be altered.

• If you run applications that bring the Spada program in the background, the connection is no longer guaranteed.

APP - SPADA - WINDOWS INSTALLATION

ACCESS TO <u>WINDOWS</u> FILE

Attention! Required operating system: Windows 7 Sp1 or successive, excluding server versions and installations on virtual machine.

Do not connect any device to PC

WINDOWS 7

Select Windows Driver file
 Set up the program Setup.exe. 32 or 64bit, in relation to installed operating system.
 <u>* Check here your operating system computer</u>

(4

Run the executable file **setup.exe**


WINDOWS 10

2 Run the program Setup.exe. 32 o 64bit, in relation to installed operating system.
 <u>* Check here your operating system computer</u>
 3 Run the executable file setup.exe

📥 Add 🗸 🛊 Conv	ert v Extract v	🗸 Test 🗸 🗙	Delete from archive	~
$\leftarrow \rightarrow \uparrow \checkmark \ \blacksquare \ \rightarrow$	C: > Users > Downloads	> MPS.rar > MPS	> WINDOWS >	SetUp_64
	Name <	Туре	Size	Packed
mPS.rar	bin	[folder]	0 B	0 B
MPS	license	[folder]	0 B	0 B
ANDROID	supportfiles	[folder]	0 B	0 B
WINDOWS	dp.pmf	.pmf	486 B	352 B
SetUp_32	nidist.id	.id	310 B	242 B
SetUp 64	🔲 setup.exe	.exe	1.3 MB	1.3 MB
Windows Drive	📄 setup.ini	.ini	14.0 KB	3.8 KB

App SPADA

WINDOWS VERSION

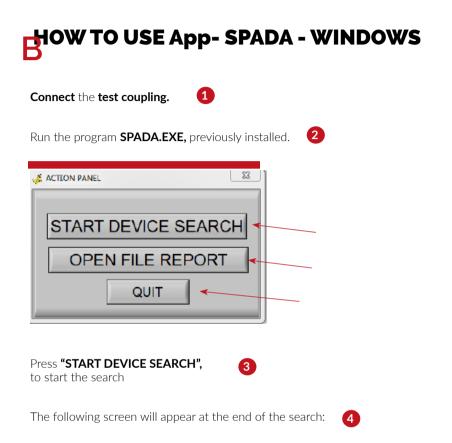

S Image: Constraint of the second secon

COMMON TECHNICAL ISSUES - WINDOWS

• If you intend to monitor the pressure for a long time, it is essential to disable the screensaver and all the energy saving options.

As described by Microsoft Technical Support, in some cases the USB ports may stop working. In this case, restart the PC or refer to the instructions described in:

https://support.microsoft.com/en-us/topic/usb-port-may-stop-working-after-youremove-or-insert-a-usb-device-1eaf82a6-04b1-2604-f096-2345d9c215ef